


VIS045 Visage LED Multipar Zoom Operation Manual

The Visage LED Multipar ZOOM delivers superb colour changing lighting effects combined with an impressive and useful zoom function. Simple operation is achieved via a rear mounted LED display system and a useful built in memory will resume the last function when the unit is switched on. This product has a temperature protect function, automatically switching off if the temperature exceeds 85°C.

A Specification:

1. Weight: 6.52kg
2. Size: 30×27×22cm
3. Power input: AC120V/240V, 60HZ/50HZ
4. Wattage: 75W
5. LEDs: 24PCS RGB 3W (R8, G8, B8)
6. Beam angle of LEDs: 10°~60°
7. 3PIN female XLR socket and 3PIN male XLR socket
8. Built-in microphone
9. Led digital display

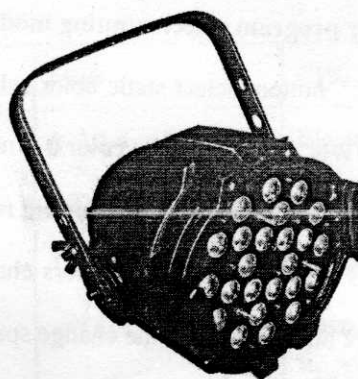

It has nine kinds of operation mode, they are as follows:

Static color program select running mode

Three colors change program running mode

Seven colors change program running mode

Three colors dreaming program running mode

Seven colors dreaming program running mode

Auto-run program mode

Sound-active program running mode

Slave running program mode

DMX control running program mode

Here above nine kinds running mode are selected by MODE button. Press MODE button and UP button at the same time, when it is on, you can initialize it at extra factory setting, running on the auto-run program mode, and the three digital will keep on displaying. Press MODE button and DOWN button at the same time, when it is on, the three digital will keep on displaying when you press any of the three buttons, then the displaying will be

automatically off after 20 seconds if you don't press any of the three buttons.

1. Electrical machine adjustment instruction

Long press MODE button(except under slave and DMX mode),it comes to electrical machine adjustment, the three digital shows "O.T.r.", after a while, it comes to show the position"X.X.X.",shows range:0-190,0 is start,190 is terminal.Under this mode, you can adjust running position of electrical machine through pressing UP or DOWN.By long press MODE button to exit electrical machine adjustment,displays program running status. Everytime,when it is on,the electrical machine come back the start ,then run to the last position

2. Static color program select running mode

press"MODE " button, select static color select program running mode. three digital displays "C.L.× " , Press "UP" or "DOWN" to select static color 0-7 under this mode.

3. Three colors change program running mode

Press"MODE" button,select three colors change program running mode. the three digital displays"JXX" .Press UP or DOWN button to select the change speed grade 1-99 under this mode.(From slow to fast)

4. Seven colors change program running mode

Press"MODE" button,select seven colors changed program running mode. the three digital displays "J.X X".Press UP or DOWN to select change speed grade 1-99 under this mode.(From slow to quick)

5. Three colors dreaming program running mode

Press"MODE" button,select three colors dreaming program running mode. the three digital displays "FXX".Press UP or DOWN to select change speed grade 1-99 under this mode.(From slow to quick)

6. Seven colors dreaming program running mode

Press"MODE" button,select seven colors dreaming program running mode. the three digital displays "F.XX".Press UP or DOWN to select change speed grade 1-99 under this mode.(From slow to quick)

7. Auto-run program mode

Press"MODE" button,select auto-run program mode. the three digital displays "A.--".Pressing UP or DOWN is no use under this mode.The seven colors changed program and seven colors dreaming program will run alternatively. Running speed is the current speed of seven colors changed program and seven dreaming program.

8. Sound-active running program mode

Press"MODE" button,selecting auto-run program mode. the three digital displays "S.XX". Press UP or DOWN to select sound-active sensitivity grade 0-31.0 is off sound-active,1 is the lowest sensitivity,31 is the highest sensitivity.

9. Slave running program mode

Press "MODE" button, selecting auto-run program mode. the three digital displays "S.L.A.". Press UP or DOWN is no use under this mode.

10. DMX control running program mode

Press MODE button, select DMX running program mode. the three digital displays DMX address "X X". Press UP or DOWN to select DMX address. You can set 512pcs address. It will flicker when there is no controller signal.

1) DMX mode

CH1	CH2	CH3	CH4	CH5	CH6
R	G	B	Dimming	0~10=on (flash is off) 11~255=Flash (slow → fast)	Electric machine adjustment 0=start 255=terminal

Instruction: "X" means number 0~9, UP and DOWN button has no long beat function under static color select program. Press MODE, UP and DOWN button at the same time, three digital displays alternatively, LED output is off. press UP or DOWN to adjust the position of electrical machine. It is convenient for repairing when it has any problem. The lens is easy to take out or put in.